 


# EUREKA

## Upright Vacuum Cleaner

Household Type

## Owner's Guide 6230 Series

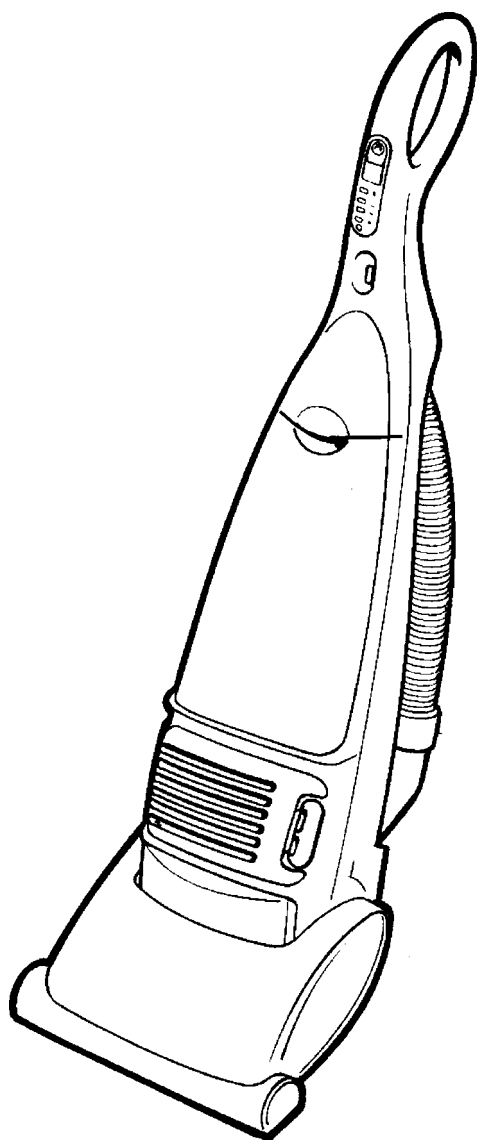

### Index

Important Safeguards .....	2
Service Information .....	4
Thermal Cut Off .....	4
Use .....	5-7
Dust Bag .....	8
Filters .....	9
Maintenance .....	10-11
Brush Roll and Belt .....	12-13
Warranty .....	19
Order Form .....	Center of Book

### **IMPORTANT**

**Do not return this product to the store.**

**For assembly problems or questions contact:** Eureka's Customer Service Division toll free at 1-800-282-2886\*, 7 a.m. to 8 p.m., Central Standard Time, Monday through Saturday.

**For replacement of broken or missing items** to be shipped direct to you, call 1-800-438-7352\*, 8 a.m. to 4:45 p.m., Central Standard Time, Monday through Friday.

**\*En Mexico llame al 5670-6169**

# IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.**

## WARNING

To reduce the risk of fire, electric shock, injury to persons or damage when using your vacuum cleaner, follow basic safety precautions including the following:

- Do not use outdoors or on wet surfaces.
- **Do not leave vacuum cleaner when plugged in.** Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction and contains a revolving brush roll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not place cleaner on furniture or stairs as the brush roll may cause damage. Place cleaner on floor with the handle in storage position while using attachments.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without paper bag or filter(s) in place.
- Belt pulleys can become hot during normal use. To prevent burns, avoid touching the belt pulley when servicing the drive belt.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your cleaner indoors in a cool, dry area.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.

## SAVE THESE INSTRUCTIONS

*Proper assembly and safe use of your vacuum cleaner are your responsibilities. Your cleaner is intended only for household use. The cleaner should be stored in a dry, indoor area. Read this Owner's Manual carefully for important use and safety information.*

# CONSEILS DE SÉCURITÉ

Lors de l'utilisation d'un appareil électrique, quelques précautions élémentaires doivent être observées, incluant les suivantes:

**LISEZ TOUTES LES INSTRUCTIONS AVANT D'UTILISER VOTRE ASPIRATEUR.**

## AVERTISSEMENT

Pour réduire le risque de feu, de choc électrique ou de blessure ou de dommages lorsque vous utilisez votre aspirateur, suivez les conseils de sécurité, y compris le suivant:

- Ne pas utiliser l'aspirateur à l'extérieur ou sur une surface mouillée.
- **Ne pas laisser l'aspirateur seul quand il est branché.** Mettre l'interrupteur sur arrêt et débrancher l'appareil lorsque vous ne l'utilisez pas ou avant l'entretien.
- Ne pas permettre que l'aspirateur soit utilisé comme un jouet. Une attention particulière est nécessaire lorsqu'il est utilisé par ou près d'un enfant.
- Suivre strictement les recommandations d'utilisation de ce manuel. Utiliser uniquement les accessoires recommandés par le fabricant.
- Ne jamais utiliser l'aspirateur si le cordon ou la fiche sont endommagés. Si l'aspirateur ne fonctionne pas comme il le devrait, s'il a été échappé, s'il est endommagé, s'il a été laissé à l'extérieur ou échappé dans de l'eau, le retourner à un centre de service avant de l'utiliser.
- Ne pas l'aspirateur ou le transporter par le cordon. Ne pas utiliser le cordon en guise de poignée. Ne pas fermer une porte sur le cordon ou tirer le cordon sur des bordures ou des coins pointus. Ne pas passer l'aspirateur sur le cordon. Tenir le cordon à distance des surfaces chauffantes.
- Ne pas utiliser des cordons de rallonge ou des prises qui n'ont pas une capacité suffisante pour transporter le courant.
- Mettre sur arrêt tous les boutons de commande avant de débrancher.
- Ne pas débrancher l'aspirateur en tirant sur le cordon. Pour débrancher saisir la fiche et non pas le cordon.
- Ne touchez pas la fiche ou l'appareil avec les mains mouillées.
- Ne rien insérer dans les ouvertures. Ne pas utiliser l'aspirateur si des ouvertures sont bloquées. Vous assurer qu'elles soient dégagées de poussière, de mousse, de cheveux ou de tout autre chose qui pourrait réduire le passage de l'air.
- Cet appareil produit de l'aspiration et certains comportent un rouleau-brosse rotatif. Tenez les pièces mobiles et les ouvertures éloignées des cheveux, des vêtements, des doigts et des parties du corps.
- Ne placez pas l'appareil sur des meubles, car le rouleau-brosse pourrait les endommager. Placez-le sur le plancher, le manche étant en position de rangement lorsque des accessoires sont utilisés.
- Ne pas ramasser des objets qui brûlent ou fument comme les cigarettes, les allumettes ou les cendres chaudes.
- Ne pas utiliser sans que le sac à poussière ou le(s) filtre(s) ne soient en place.
- Les poulies de la courroie peuvent s'échauffer pendant l'utilisation normale. Pour empêcher de vous brûler, évitez de toucher la poulie de la courroie lors de l'entretien ou le remplacement de la courroie.
- Porter une attention particulière lorsque vous nettoyez les escaliers.
- Ne pas utiliser pour ramasser des liquides inflammables ou combustibles, comme de l'essence. Ne pas utiliser dans les endroits où ces liquides pourraient être présents.
- Entreposer votre aspirateur à l'intérieur, dans un endroit propre et sec.
- Maintenir un bon éclairage à l'endroit où vous travaillez.
- Débrancher les appareils électriques avant de les passer à l'aspirateur.

## CONSERVEZ CES INSTRUCTIONS

*L'assemblage et l'emploi corrects de votre aspirateur sont votre responsabilité. Votre aspirateur est conçu uniquement pour l'emploi ménager. Il faut entreposer l'aspirateur dans un endroit sec, à l'intérieur. Lisez le manuel du propriétaire avec attention pour des renseignements importants concernant l'emploi et la sécurité.*

To reduce the risk of electric shock, this appliance has a polarized plug (one blade wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

Afin de réduire le risque de choc électrique, cet appareil est muni d'une fiche polarisée (une des lames est plus large). Cette fiche ne peut être insérée dans une prise polarisée que d'une seule façon. Si la fiche ne peut être insérée dans la prise, retourner la fiche. Si la fiche ne peut toujours pas être insérée dans la prise, faire installer une prise adéquate par un électricien qualifié. Ne pas modifier la fiche.

## GENERAL INFORMATION

The cleaner is designed to pick up dirt and dust particles. Avoid picking up hard or sharp objects with the cleaner to prevent bag tears, hose clogs, and fan blade breakage with subsequent motor damage.

## Service Information

The instructions in this booklet serve as a guide to routine maintenance. For additional service information telephone our toll free number for the nearest Eureka Authorized Warranty Station. **You should know the model, type and serial numbers when you call:**

**USA: 1-800-282-2886**  
**Mexico: 5670-6169**  
**Canada: 1-800-282-2886**

If you prefer, you can write to The Eureka Company, Service Division, 807 North Main Street, Bloomington, Illinois 61701, USA. In Canada write to The Eureka Company, 866 Langs Drive, Cambridge, Ontario N3H 2N7. Refer to The Eureka Limited Warranty for complete service information.



**DO NOT OIL the motor or the brush roll at any time. The bearings are permanently lubricated and sealed.**

## Rating Plate

The model, type, and serial numbers are indicated on the rating plate located on the back of the cleaner. For prompt and complete service information, always refer to these numbers when inquiring about service.

 
MODEL	TYPE	SERIAL NO.
VOLTS	AMPS.	HERTZ
SERVICE INFORMATION: 1-800-282-2886		
THE EUREKA COMPANY		
BLOOMINGTON, ILLINOIS 61701		

**Model & Type** \_\_\_\_\_  
**Serial No.** \_\_\_\_\_

## Thermal Cut Off


This vacuum cleaner has a special thermostat that protects the cleaner in case of motor overheating. If the cleaner suddenly shuts off, push the switch pedal once and unplug the cleaner. Check the cleaner for a possible source of overheating such as a full bag, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the cleaner. After the 30 minute period, plug the cleaner back in and turn on the switch. If the cleaner still does not run, then take it to a Eureka Authorized Service Center for repair.

## All About Your Cleaner

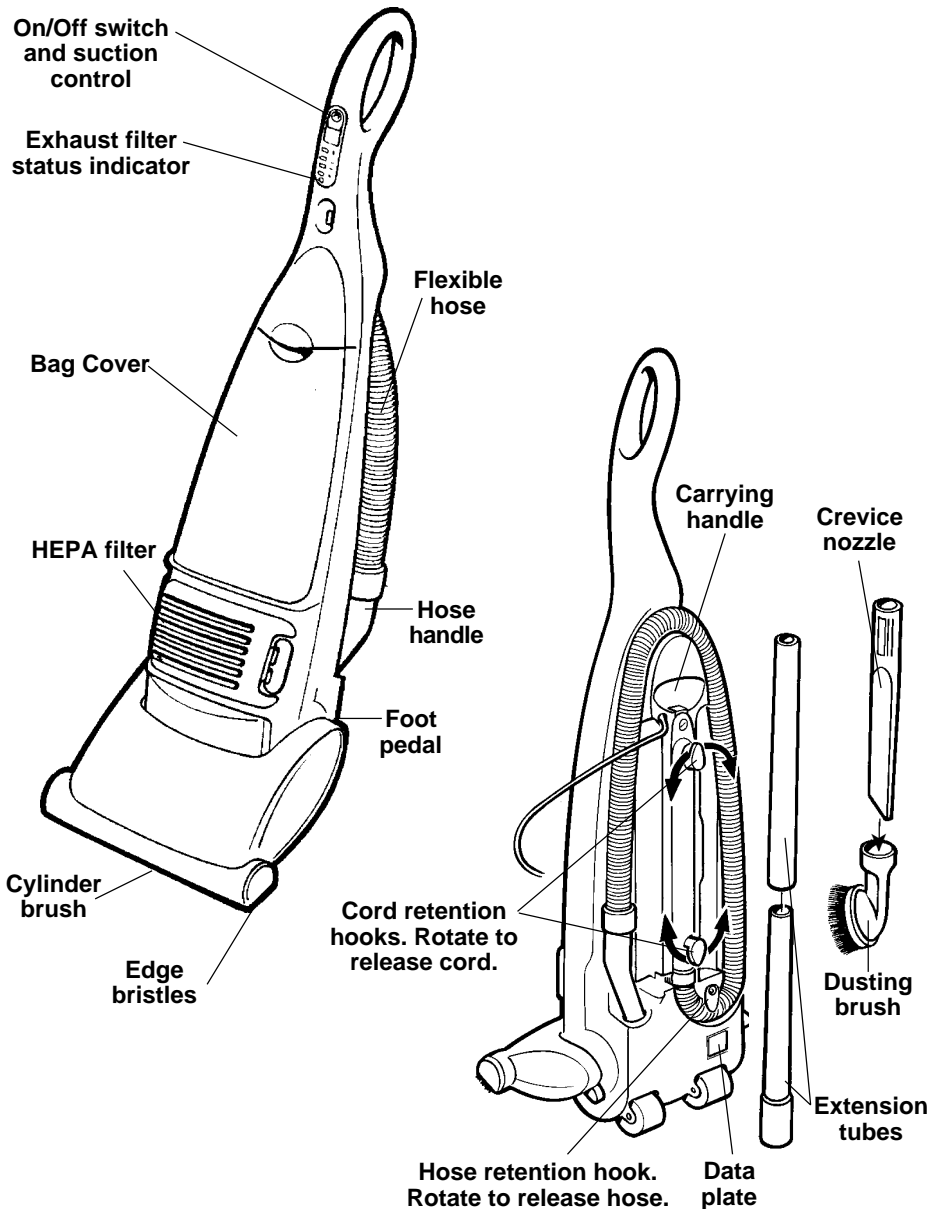

## HOW TO USE

 The upright vacuum cleaner design allows use on multiple types of carpeting and on upholstery or bare floors with attachments. **When using the attachment tools, place the handle in the upright position. Do not place cleaner on furniture or steps as the brush roll may cause damage.**

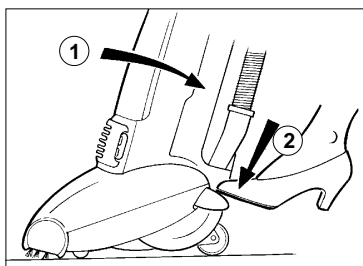

## Using Your Cleaner

 
Release the cord by turning down the top cord hook and connect to your electrical outlet.

Tilt the cleaner towards you (1) and tap the pedal with your foot (2). The brushes will automatically come into contact with the floor. Switch on.


For cleaning under furniture continue the downward movement of the handle and tap the pedal once more to bring the brushes into contact with the floor.

## The Controls

### 3-speed Power Setting

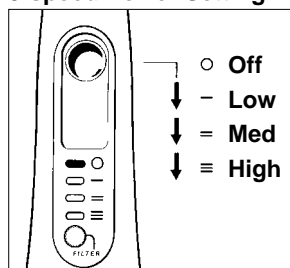

 Move switch from off position increasing power as you slide switch from low to high. High provides the best cleaning power and dust separation.

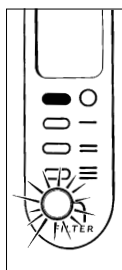


### Filter indicator

Red neon indicator comes on when the washable HEPA filter needs cleaning or changing. See page 9 for instructions on changing or cleaning.

## Cleaner Height Setting


**WARNING:** Avoid injury. Keep loose clothing, hair, fingers, and all other parts of body away from any moving part (such as the revolving brush). Turn off the switch and unplug the cleaner before changing the cleaner height setting.

 The front of the cleaner has an adjustment that raises or lowers the cleaner base to match the type of carpet. With the cleaner cord unplugged, set the adjustment to lowest setting for maximum cleaning. If the cleaner is difficult to push, move adjustment to next highest setting until cleaner is comfortable to push. The brush roll must reach the carpet for effective cleaning.






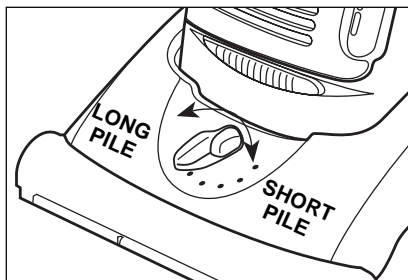





## Using the Accessories

 Simply remove the flexible hose and hose handle from the rear of the machine (Fig. A) and add to it any of the tools which are stored in the back of the machine (Fig. B).

The dusting brush can be attached to any of the other tools as shown and can be used to clean small areas of carpets such as stair treads and cushion covers etc. The crevice nozzle is designed for cleaning in narrow difficult places. To reach high ceilings, curtains, etc. assemble the extension tubes on the hose handle (Fig. C) and fit the attachment required to the end marked  (Fig. D).

         The extension tube assembly consists of two tubes - with one located **inside the other** for storage. Assemble only as shown. After using the flexible hose, always ensure that the hose handle is pressed firmly into the socket to complete the air seal. Fit the flexible hose over the carrying handle and replace the auxiliary tools in their correct locations. (See Figs. E and F).

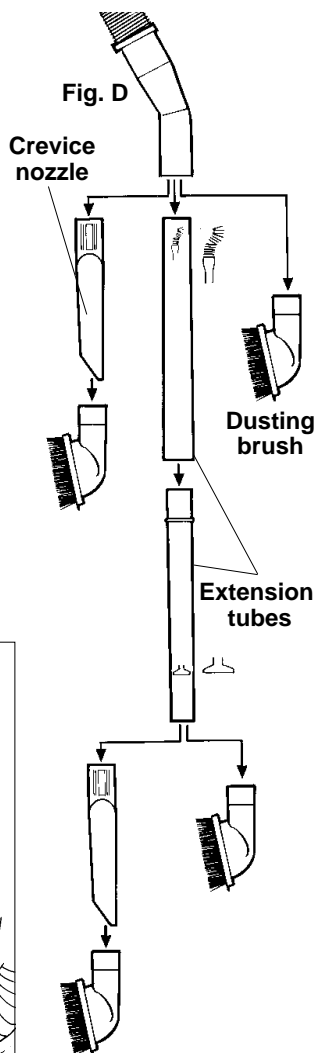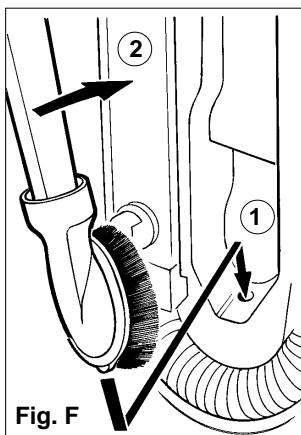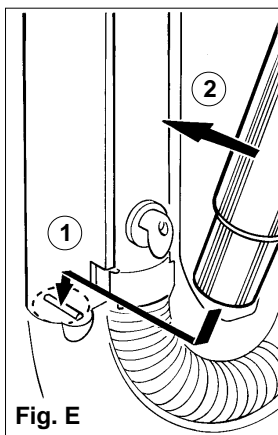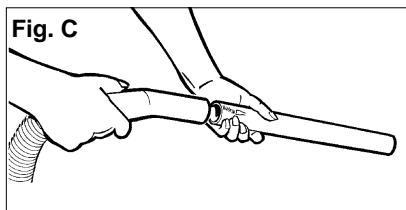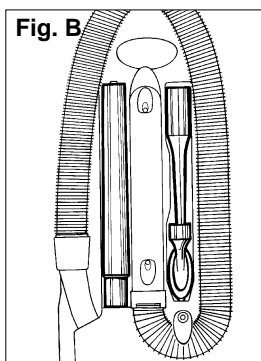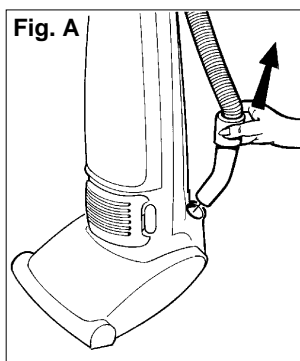

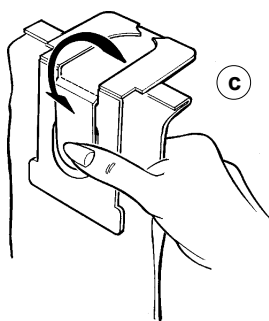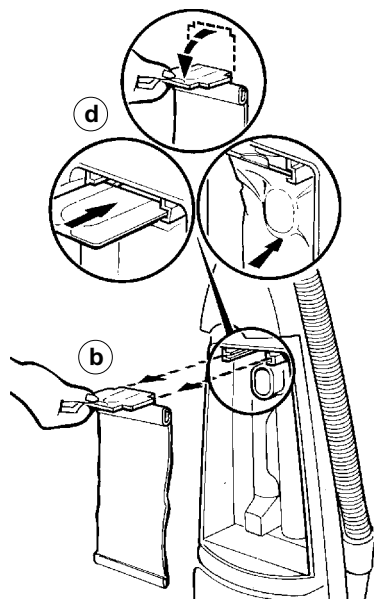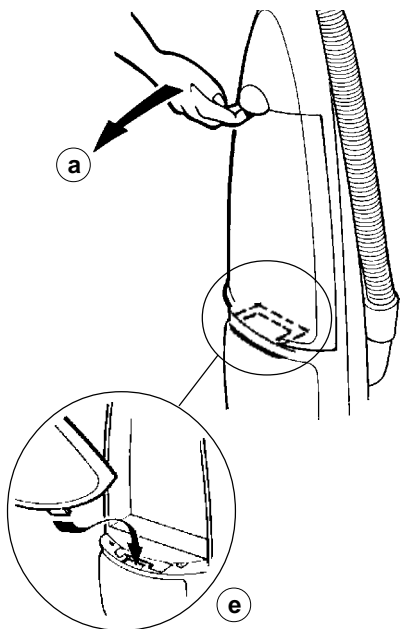

## Checking and Changing the dust bag.

**NOTE:** Turn off the switch and unplug the electrical cord before changing dust bag. Never operate the vacuum cleaner without the dust bag or the filter.

When the bag status indicator becomes completely orange, the bag should be checked or changed at once to maintain effective operation.

- Remove the dust bag cover as shown.
- Slide out old dust bag.

- Bend card finger on old dust bag over into dust hole to prevent dust from escaping and dispose of bag.
- Insert new dust bag ensuring it is correctly located.
- Ensure that the bag does not interfere with the closing of the dust bag cover and correctly replace cover.

 
The disposable dust bag plays a very important role in the efficiency of a vacuum cleaner. The purpose of the paper bag is to trap dirt. As the bag traps dirt, it must also be porous enough to allow air to pass on through. If the paper bag becomes clogged, no air can pass through the cleaner and no cleaning can take place regardless of how powerful the unit. Change the dust bag and check the filters frequently. Some fine particles can restrict airflow very quickly and will decrease performance even before the bag appears to be full.

When vacuuming carpet fresheners or cleaners, powder, plaster dust, or similar fine substances, the bag and filters may require more frequent maintenance.



## Maintaining Good Performance


### Changing the motor protection filter

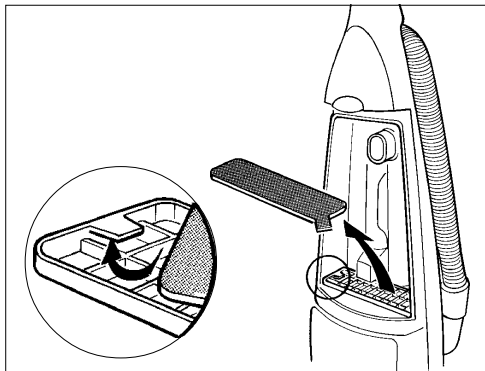

The motor filter should be changed at least 3 to 4 times a year depending on usage to ensure efficient performance of your cleaner. To improve filtration the motor filter is carbon impregnated to absorb household smells.

### HEPA filter

 When the red filter indicator comes on follow the steps 1 through 4 detailed below. If after cleaning the indicator light remains on, it is time to replace the filter.

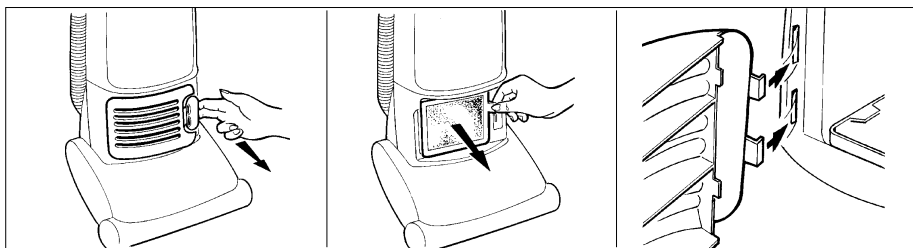

### Cleaning the CleanStream® Washable HEPA Filter

1. Holding filter by its plastic frame, carefully remove filter from vacuum cleaner.
2. Rinse dirty side of filter under warm water, low pressure tap water. Water should flow parallel to pleats. Angle filter to water stream to wash dirt from ridges of pleats.
  - Avoid getting clean side of filter wet during washing. Wetting clean side will increase drying time.
3. Angle filter and rinse from opposite direction. Continue this process until filter is clean.
4. Carefully shake water from surface of filter and allow filter to dry at least 60 minutes before reinstalling filter in vacuum cleaner. Do not put damp filter back in vacuum cleaner.

**CAUTION:** If your cartridge does not say “CleanStream® HEPA Filter” it is not reusable - Do Not Wash.

### Cleaning the HEPA Filter

1. Holding filter by its plastic frame, carefully remove filter from vacuum cleaner.
2. Shake or brush filter over a waste container.
3. Replace in vacuum cleaner.

 
**Important:** Regular changing and cleaning of the filters is essential to ensure high filtration of dust particles and will enhance your cleaners performance and extend its life-span.

**Note:** See safety features on Page 16 to help you to identify when your filters may be blocked and require changing.

## User Maintenance

**IMPORTANT:** Switch the cleaner off and remove plug from electrical outlet before repairing or servicing your cleaner.

**Reduced pick-up . . . but no suction at hose handle**

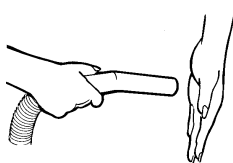


Check all filters and replace if necessary.

Particular attention should be paid to filter at the rear of the Cyclonic cassette.

Check rear air-tube and unblock if necessary by following steps 1, 2 and 7.

 Check hose for blockages by following steps 1 to 7.

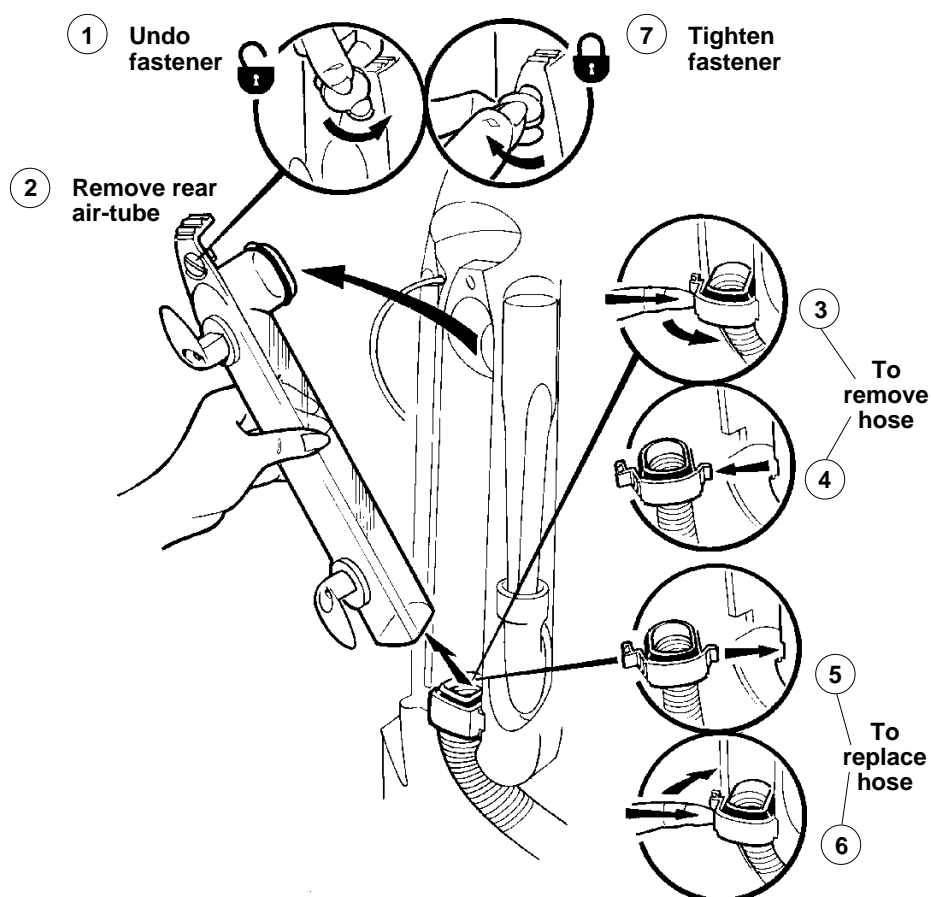

customer order form goes here  
it is an 8 1/2 x 11

customer order form goes here  
it is an 8 1/2 x 11


customer order form goes here  
it is an 8 1/2 x 11

customer order form goes here  
it is an 8 1/2 x 11


## User Maintenance

 **IMPORTANT:** Switch the cleaner off and remove plug from electrical outlet before repairing or servicing your cleaner.

### Reduced pick-up . . . but suction at hose handle

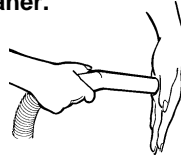

 If your cleaner ceases to pick up dust, a blockage may have occurred between the cleaning head and the hose. Clearing the blockage is simple.

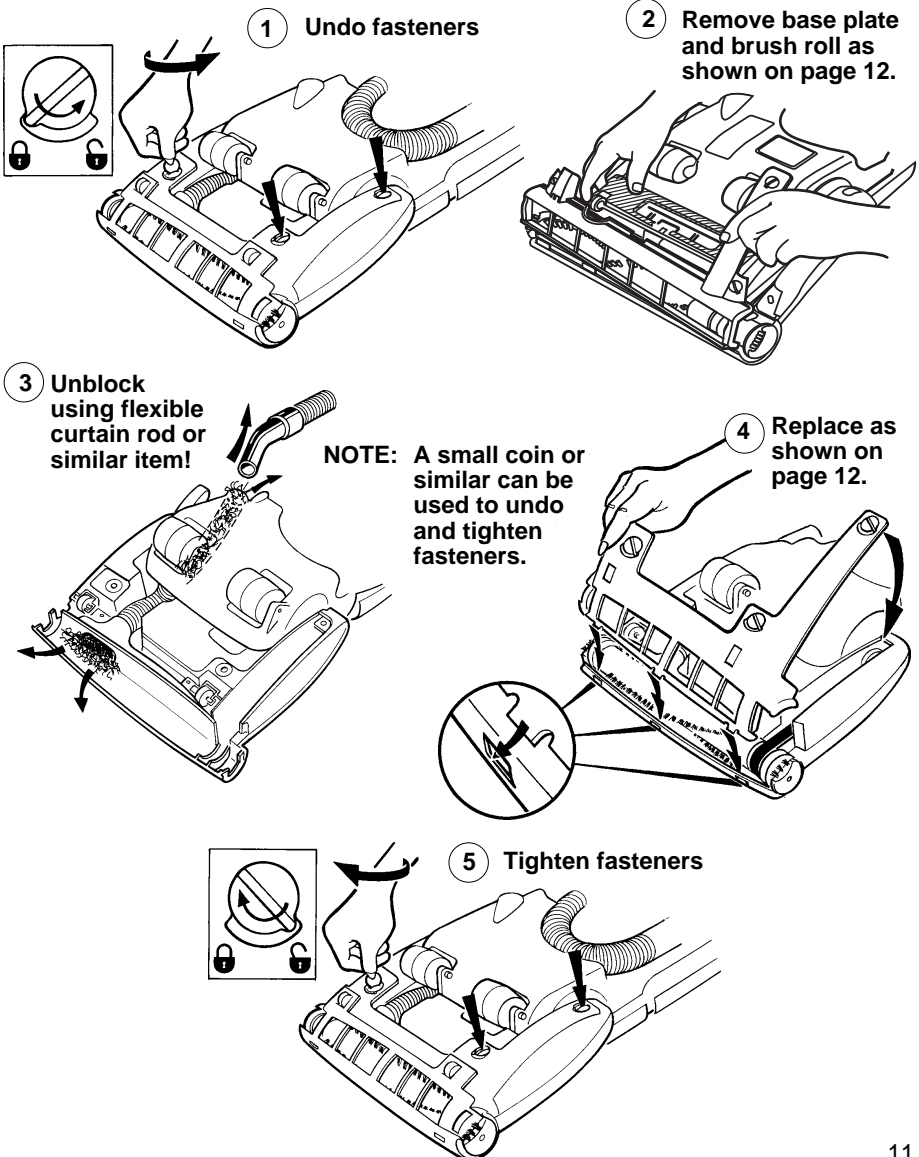


## User Maintenance

### Changing the rubber drive belt and brush roller

- The motor drives the brush roller by means of a rubber belt. To prevent damage to the belt, the motor should be switched off immediately if the roller becomes jammed by picking up large solid objects, carpet fringes or the like.
- This is usually obvious from the change in the sound of the motor or the smell of burning rubber. Should the belt fail and the brush roller cease to rotate then replacement is very simple as shown below.
- After some time, depending on the nature of the surfaces that are cleaned, the bristles of the rotating brush will become worn. To maintain efficiency, once the bristles become worn, the brush roller assembly should be replaced, as shown below.

 **IMPORTANT:** Switch the cleaner off and remove plug from electrical outlet before repairing or servicing your cleaner.

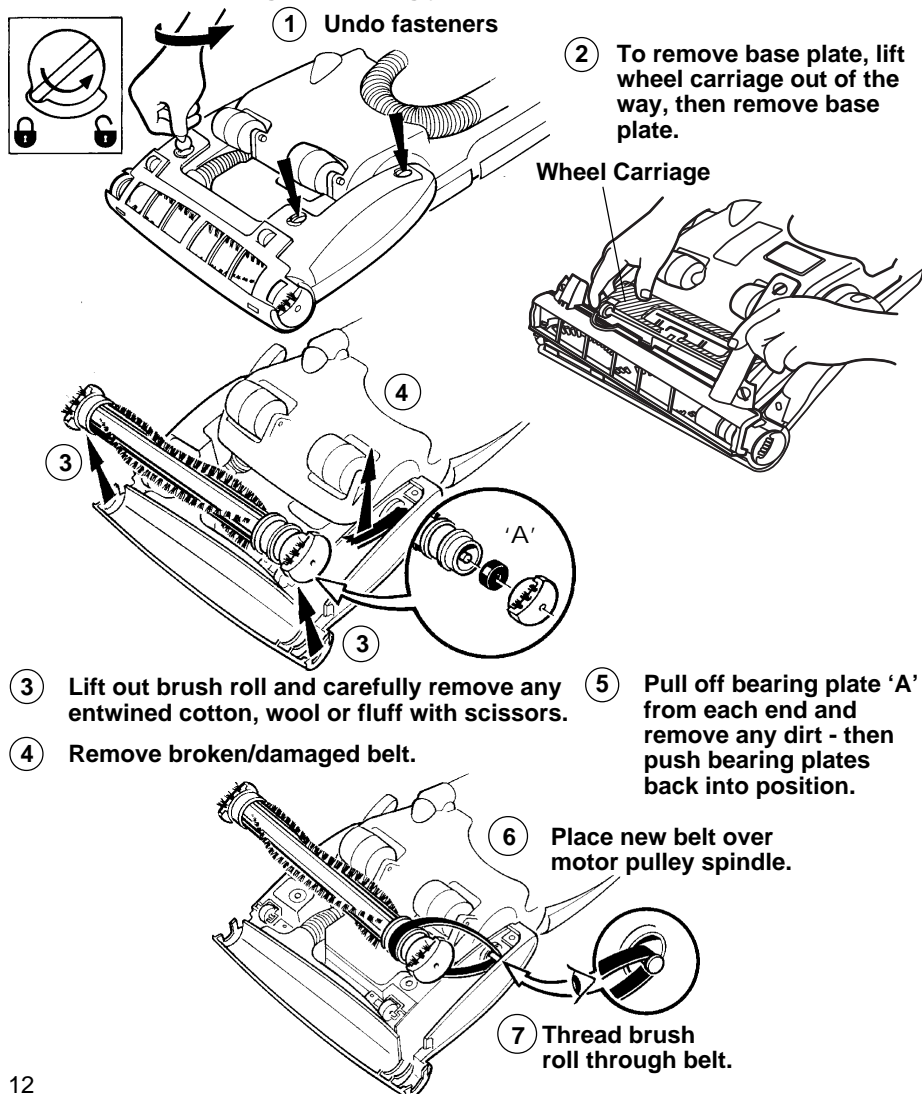




## User Maintenance



- 8 Push this end in first
- 9 Pull brush roll forward
- 10 Locate this end

 **NOTE:** Rotate brush roll to centralize belt.

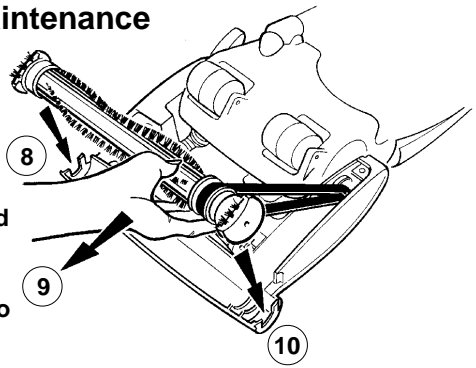

- 11 Lift wheel carriage.

### Wheel Carriage

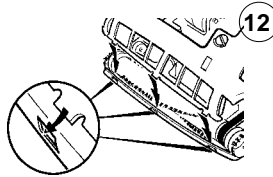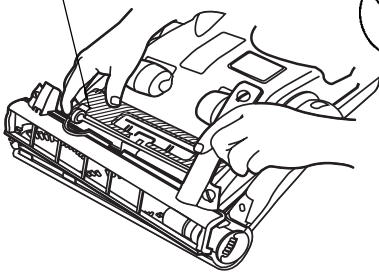  


**12** Replace base plate by inserting tabs on base plate into slots on base of unit. Drop wheel carriage back into place.

- 13 Tighten fasteners



**IMPORTANT:** This area must be hooked under before tightening fasteners.

 
**NOTE:** After replacing base plate switch cleaner on and check brush is rotating before using again.

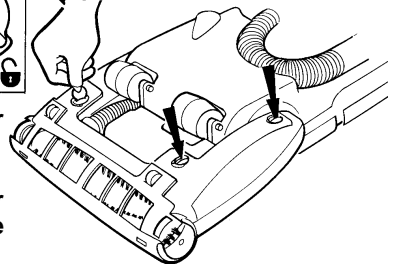

## How To Replace Light Bulb

**NOTE:** Turn off the switch and unplug the electrical cord before changing light bulb.

 1. Remove two screws from the top of lens. Remove lens to access light bulb.
2. Pull out light bulb; push new bulb into place. **Use Genuine Bulb No. 57940-2.**
3. Install headlight lens to proper position on hood. Secure with the two screws.

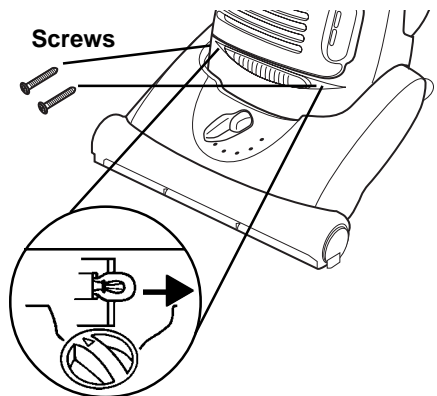

## Please Note

**The brush roller in the cleaning head rotates at high speed and can cause damage to the electrical cord if the cleaner passes over it during cleaning operations.**

Care should be taken to ensure that this does not happen.

If the cleaning head has accidentally passed over the electrical cord the following action should be taken:

1. Switch off and remove the plug from the electrical outlet.
2. Examine the electrical cord for damage (only after removing the plug from the electrical outlet).
3. If there is any sign of damage to the electrical cord it **MUST** be replaced; we recommend that this should be carried out by an authorized Eureka Service Center.
4. **NEVER** use the machine with a damaged electrical cord.

**While using the accessories the brush roller of the cleaner continues to rotate, therefore we advise against allowing the vacuum cleaner to run on the same spot for long periods as this could cause over-brushing of the carpet pile beneath.**

## Safety Features

Your cleaner is fitted with a safety device to help you identify when a blockage has occurred and subsequently to prevent your cleaner overheating.

If you continue to use your cleaner with a blockage present the motor will automatically stop for a few minutes to prevent overheating as your cleaner is fitted with a thermal cut-out. In this event switch off your cleaner, disconnect from the electricity supply and allow your cleaner to cool. Ensure all blockages are cleared.

Note: If your cleaner does not start again, allow extra cooling down time.

## Remember

 
 
 
 
 
 
1. If your cleaner does not operate, check the plug connection, plug fuse and mains fuse.
2. Should a blockage in the hose occur, try pushing a length of ordinary curtain expander wire with a blunt hook on it through the hose to dislodge the blockage, taking care not to damage the inside of the hose. If this is not successful, contact the nearest Service Center. Picking up items such as needles, pins, hair pins, clippings of cloth, sizeable pieces of paper, wrappings from cigarette packets or sweets, etc., may block the hose. We regret that they cannot regard the clearing of blocked hoses as a service that can be given, free of charge, under the guarantee.
3. Never pick up hot cinders or lighted cigarette ends.
4. **Make certain that your cleaner always remains dry and does not come into contact with water or any other liquid. It is not designed as a wet pick-up cleaner, and must never be used on damp carpets or wet floors.**
5. Always store your cleaner in a dry place.
6. Renew both the filters regularly in accordance with the Instructions for use.
7. To ensure the smooth running of your cleaner, from time to time remove the base plate of your cleaner and go through the sequence on page 11.

## Important Safety Instructions

It is important that this instruction book should be retained with the cleaner for future reference. Should the cleaner be sold or transferred to another owner, or should you move and leave the cleaner, always ensure that this book is supplied with it in order that the new owner can be acquainted with its functions and the relevant warnings.

Your new vacuum cleaner is intended for household use; its life may be shortened if it is used extensively for other purposes. For heavy-duty vacuuming, e.g. during renovation work, we recommend that you use one of our commercial cleaning products.

These warnings are provided in the interest of safety. You should read them carefully before using the cleaner.

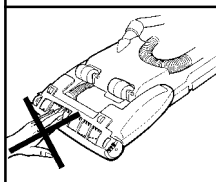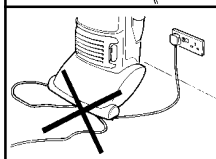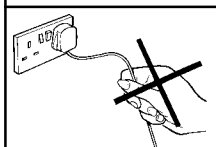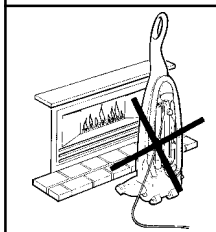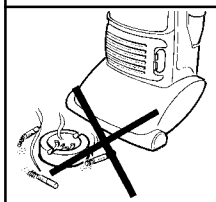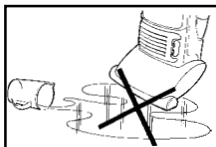

### ● Cleaning conditions

- **Always store your vacuum cleaner in a dry place away from damp atmosphere and do not use it to pick up water or other liquids.**

- Avoid vacuuming freshly shampooed carpets while still damp.

- Never pick up hot cinders or lighted cigarette ends.

- Do not use the cleaner in the presence of flammable gases.

- Keep the cleaner away from open fires or other heat sources such as gas fires or radiators when they are on.

### ● Electrical Cord

- Do not pull on the electrical cord to remove the plug from the wall socket.

- **Ensure the electrical cord is kept well away from the rotating brush of your cleaner while in operation.**

- Never allow anyone to have access to the rotating brush unless the cleaner is disconnected from the electrical outlet.

- Remove the plug from the wall socket before attempting any form of user maintenance specified in the Instructions for use.

- Do not carry or drag your vacuum cleaner by the electrical cord.

- Keep the electrical cord away from heat, oil, sharp edges and rough surfaces to prevent damage to the cord.

### ● Using the cleaner

- This cleaner is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the cleaner.

- Never leave the cleaner running unattended.

- Extreme care is required when cleaning stair carpets with your cleaner. Ensure that your cleaner is in a stable position at the bottom of the stairs, and take care not to overstretch the hose.

- When fitting and changing the accessories always follow the Instructions for use.

## Important safety instructions

### ● Filters

- Regularly inspect filters and replace them when necessary according to the instructions for use.
- Always use genuine filters.

### ● Service and repair

- It is dangerous to alter the specifications or modify the cleaner in any way.
- Under no circumstances should you attempt to repair the cleaner yourself. Repairs undertaken by unauthorized or inexperienced persons may cause injury and/or serious malfunctioning.
- **In the event the electrical cord has been damaged in any way, it must be replaced and we recommend that this be carried out by a Sears service agent as special purpose tools are required.**
- This cleaner should be serviced by authorized personnel and only genuine replacement parts should be used.



- **ALWAYS** work with the cleaner below you. Ensure it is positioned up against the bottom step.



- **Don't stand the cleaner above you at the top of the stairs.**



- **Don't position the cleaner on the stairs.**





# THE EUREKA LIMITED WARRANTY

## *What This Warranty Covers*

Your Eureka cleaner is warranted to be free from all defects in material and workmanship in normal household use for a period of one year. The warranty is granted only to the original purchaser and members of his or her immediate household. The warranty is subject to the following provisions.

## *What This Warranty Does Not Cover*

- Parts of the cleaner that require replacement under normal use, such as disposable dust bags, filters, drive belts, light bulbs, and brush roll bristles
- Damages or malfunctions caused by negligence, abuse, or use not in accordance with the Owner's Guide.
- Defects or damages caused by unauthorized service or the use of other than Genuine Eureka parts.

## *What The Eureka Company Will Do*

The Eureka Company will, at its option, repair or replace a defective cleaner or cleaner part that is covered by this warranty. As a matter of warranty policy, the Eureka Company will not refund the consumer's purchase price.

## *Warranty Registration*

Please fill out and return the warranty registration card accompanying your cleaner.

## *Obtaining Warranty Service*

To obtain warranty service you must return the defective cleaner or cleaner part along with proof of purchase to any Eureka Authorized Warranty Station.

You will find the nearest location in the Yellow Pages, under "Vacuum Cleaners—Service and Repair." Be certain that the Warranty Station is "Eureka Authorized."

For the location of the nearest Eureka Authorized Warranty Station or for service information, telephone toll free:

**USA: 1-800-282-2886**

**Mexico: 5670-6169**

**Canada: 1-800-282-2886**

If you prefer, you can write to The Eureka Company, Service Division, 807 North Main Street, Bloomington, Illinois 61701, USA. In Canada write to The Eureka Company, 866 Langs Drive, Cambridge Ontario N3H 2N7.

If it is necessary to ship the cleaner outside your community to obtain warranty repair, you must pay the shipping charges to the Eureka Authorized Warranty Station.

Return shipping charges will be paid by the Warranty Station. When returning parts for repair, please include the model, type, and serial number from the data plate on the cleaner.

## *Further Limitations and Exclusions*

Any warranty that may be implied in connection with your purchase or use of the cleaner, including any warranty of Merchantability or any warranty for Fitness For A Particular Purpose is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall Eureka be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the cleaner. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary by state.

**GENUINE**  
EUREKA PRODUCT

## *Questions & Answers about Genuine Eureka Products*

Q: Why should I use only Genuine Eureka paper bags, belts, and parts in my Eureka vacuum cleaner?

A: Using Genuine Eureka Products, which are made to our exacting specifications and engineered with emphasis on quality, performance, and customer satisfaction, ensures the long life and cleaning efficiency of your vacuum cleaner. Overall, this saves you money and helps to keep your home clean.

Q: How can I be sure I am using only genuine Eureka products in my vacuum cleaner?

A: Typically, packaged products and paper bags can be identified by a "Genuine Eureka Product" symbol (see illustration above). For further identification assistance, you may call our toll-free number, 1-800-282-2886, for the location of a nearby Eureka Authorized Warranty Station.

Q: Are there any differences between "made to fit" or "imitation" and Genuine Eureka paper bags, belts, and parts?

A: Yes, there are some very important differences in materials, quality, and reliability. Many customers have mistakenly purchased "imitation" paper bags and parts while thinking they purchased genuine. Unfortunately, many of these customers discovered the differences after they experienced related difficulties.

**For Genuine Eureka Value, Accept No Imitations!**

**THE EUREKA COMPANY**

Bloomington, Illinois 61701

